

Model 8008

INSTALLATION MANUAL OF SHOWER ROOM



Cautions in Installation and Using

Thank you for Selecting our bathroom series. To guarantee safety and normal operation of products as well as prolong the service life, please pay attention to the following cautions

1. After opening the case, read this introduction carefully, check all the packed parts, examine the shower cabinet for transportation. If the unit has been damaged or has a finishing defect, please contact your local distributor. Your distributor's responsibility for damage in transit is limited after the shower package has been transferred to the transportation company, so you may have to contact the transportation company directly to report damage.

2. You should make sure that the floor is leveled and solid and will be able to support the total weight of the unit and its occupant. You should also consult your local building codes on question on installation compliance standards.

3. Install all of the required plumbing and drainage before securing the shower

4. Please insure that prior to the installation the floor is leveled and the walls are at right angles. While some adjustment in leveling of the tray is possible, irregular floor level or improper angle of side walls will result in serious problems for your installation.


5. Assembled initially is not close, Diately sll screws and nuts must be serewed tightly before using.

6. The socket pf steam, generator shall adopt qualified product with >25Acap acity. Otherwise the contact may be overheated and cause fire.

7. After using, client shall turn off power feeder switch to avoid long-term energizing in the system and speeding up the aging.

8. Use clean water., If the water source is not claeen enough, filtration is needed.

9. Telephone line shall not be installed in parallel with other telephone set. (Additional active deconcentrator shall be installed, otherwise the quality of telep-hone communication will be lowered or no sound can be heard).

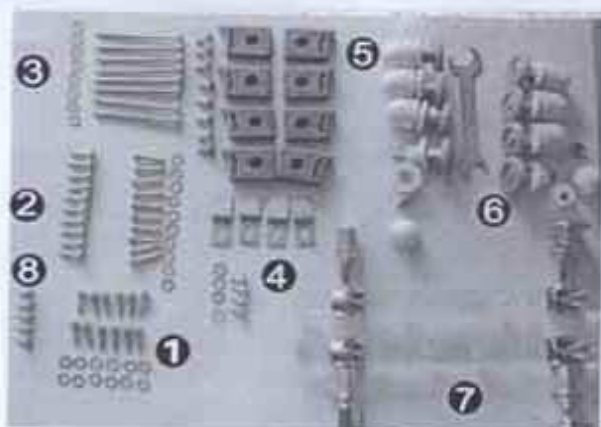


- ① 4X16 12pcs screws between tub and backboard; between backboard and top.
- ② 4X20 20pcs screws between glassroom and backboard between backboard and aluminum panel.
- ③ 4X60 8pcs screws between rails and side aluminum.
- ④ 4X8 4pcs screws for the fixed glass door.
- ⑤ 4X8 8pcs movable glass door stop.
- ⑥ 8pcs wheels and spanner.
- ⑦ 2pcs handles.
- ⑧ 4X8 5pcs screws between glass room and top.




- ⑨ 1 Sliding bar connected with glass backboard.
- ⑩ 4X25 4 pcs screws and 1pc shelf connected with glass backboard.
- ⑪ 14X20 2pcs pleastic screws and 1pc foot massage connected with glass backboard.
- ⑫ 1 Handle shower connected with sliding bar.
- ⑬ 1 Shampoo holder




- ⑬ 1 Top shower fixed on the top.
- ⑭ 12X20 Back-rest fixed on the aluminum panel.
- ⑮ 4pcs copper connector
- ⑯ 1pc pillow fixed on the tub.
- ⑰ 1pc pipe connected with the foot massage.

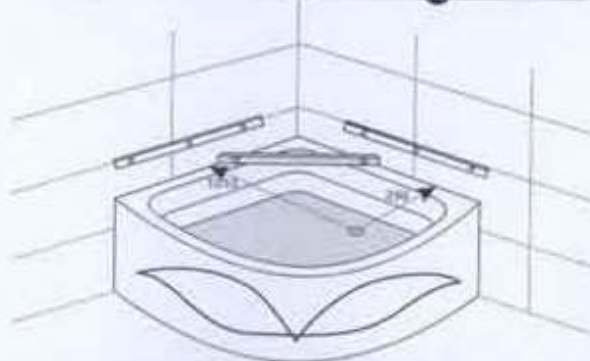

1. After open the package, put the tub where you would like to install the shower room.
2. Lift the tub and insert the drain into the drainage outlet.
3. Put the tub tight to depend the walls, and examine whether the floor is leveled with spirit level.
4. Revolve the feet of the tub, adjust the level of the tub, and tighten the nuts.

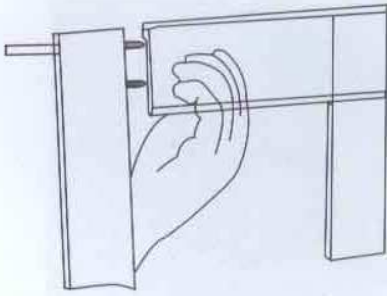


Connect up & down rails with side aluminum and tighten screws, make up aluminum frame

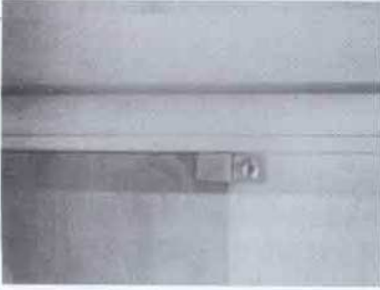

Install the fixed glass door which are without holes in the two sides, use the door-stop to fix them



Install the wheels in the movable glass door, then hold it on the aluminum rail

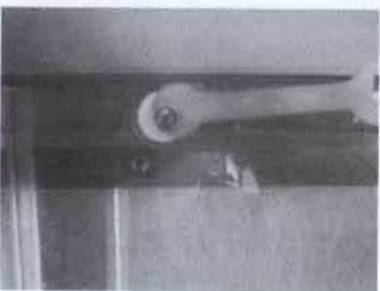

Adjust the wheels to make suitable sliding




Install the two water-proof belt on the fixed glass-doors.



Install the handles on the movable glass-doors, tighten the screws




Connect the tub and the glass backboard with screws

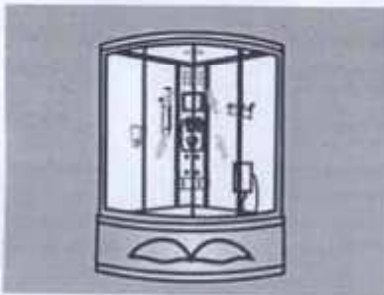

Connect the glass door with the glass backboard, then fix the top




Check if the water pump and steam generator are in the position

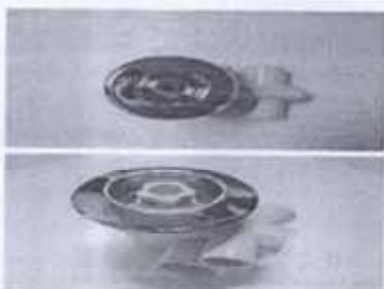


The inner of the big water jet can adjust the volume of water



Connect the wire of the steam generator to the main control box, fix it

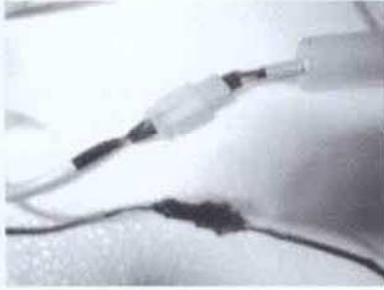


Connect the same color wires

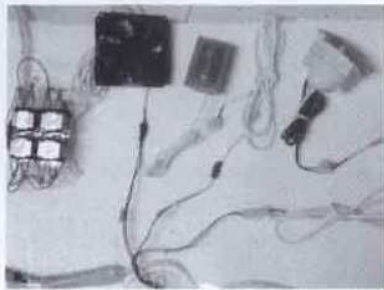

Connect the wires complying with the mark



- ① Connect to the steam outlet
- ② Connect to the cold water pipe to the faucet
- ③ Connect the steam generator and expel surplus water

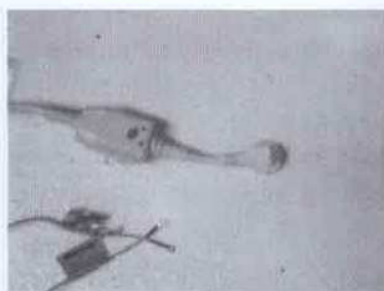

Install the ground wire, then connect the plug to the electrical




Switch for the water pump



**Filter waste when having
massage**



**Adjust the volume of water when
having massage**

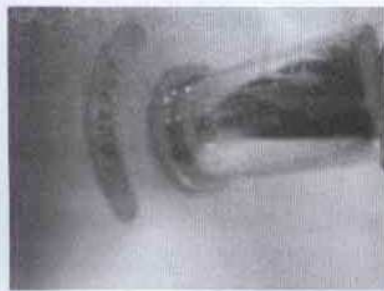

Output in the tub



**Connect the waste pipe to the family
drain after installation**

Cleaning and Maintenance

1. For routine cleaning of steam bathroom, use ordinary detergent and soft cloth. Do not use the detergent that contains acetone or annonallquor. In cleaning, do not use the disinfectant that contains formic acid and formaldehyde. If any besmirch is left by rubber sealant, wipe it gently using soft cloth wick little gasoline.
2. Should any scratch be found at the surface of frame., sandpaper it with water using 1500#waterproofabrasive paper, then apply tooth paste and polish the surface with soft cloth.
3. Poremove scale incrustation on the surface of frame, wipe it using soft cloth with the detergent containing light acid such as lemon juice or vlflegar.
4. Gilt and chrome-plate dpart needs no frequent wiping.
5. Do not use utensil of rough surface and detergent containing chemical solution or grains to wipe the frame.
6. Do not strike or scratch the frame with blunt or knife